How to Install Bulk Ink System

Follow the below steps

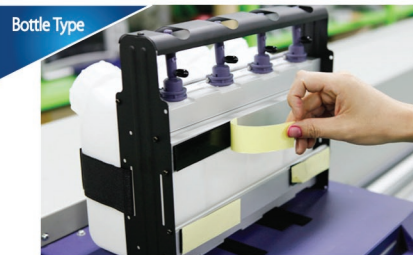**Bottle Type** 1 → 2 → 3 → 4 → 5 → 11 → 13

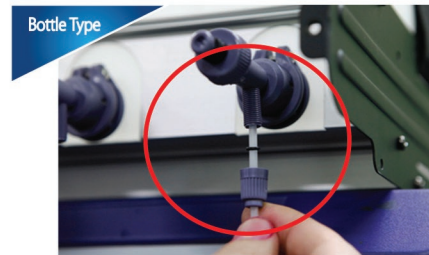**Ink Pouch Stand Type** 1 → 6 → 7 → 8 → 9 → 10 → 12 → 13

Bottle Type

1. Plug each cartridge on a printer and remove a black cover.

Bottle Type

2. Detach the paper from the bottom of a bottle unit and place it on the preferable location.

Bottle Type

3. (Remove the front cover if needed.) Fit an ink tube with a connector and fit it with O-ring. Then place and push it to the end, and fasten the connector with hand. (refer to 2-1 How to connect an ink tube)
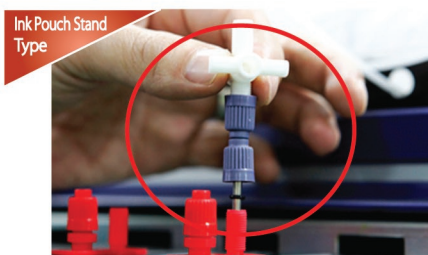
Bottle Type

4. Cut a ink tube with proper length from the bottle and connect an ink tube to a cartridge with same way of connecting it to bottle. (refer to 2-1 How to connect an ink tube)

Bottle Type

5. Connect each bottle to each cartridge with an ink tube (a bottle with double ink line is connected to two cartridges/a bottle with single ink line is connected to one cartridge).
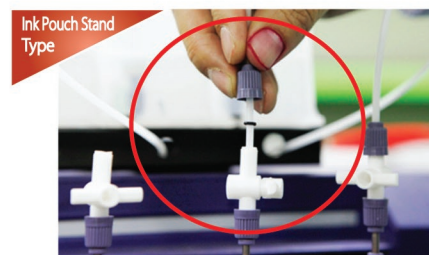
Ink Pouch Stand Type

6. Detach the paper from the bottom of an ink pouch stand and place it on the preferable location.

Ink Pouch Stand Type

7. After connecting a T-lock valve by fitting a connector and O-ring. Place and push it to the end and fasten the connector.

Ink Pouch Stand Type

8. Install all T-locker valve on each cartridge (Horizontal position means close and vertical position means open)

Ink Pouch Stand Type

9. Cut an ink tube with proper length from 1 liter ink pouch stand and connect an ink tube to each T-lock valve.
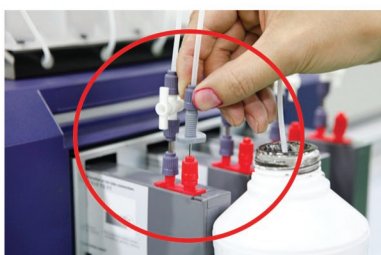
Ink Pouch Stand Type

10. Connect all ink tubes on each cartridge.

Bottle Type

11. Open the cap each bottle and fill ink into each bottle with its corresponding color.

Ink Pouch Stand Type

12. Put the 1 liter bagged ink in the case and plug it to each stand with its corresponding color and open the T-valve to let ink supply to cartridges.

13. After filling ink in cartridges, slightly unfasten an air removal cap and put a suction needle in it to remove air, then fasten the cap.

InkTec

Go Green with InkTec   RoHS COMPLIANT   REACH COMPLIANT